

**MOON JUMP RENTAL
INDEMNIFICATION AGREEMENT**

INDEMNIFICATION: Inflatable amusement attractions such as Moon Walks ("Rented Items") are inherently dangerous and should be used with great care. You agree to assume all risks inherent in the use of the Rented Items by You and all others. You agree to assume the entire responsibility for the defense of, and to hold First Place Rental and , Inc. harmless from any and all claims for damage to property or bodily injury (including death), resulting from the use, operation or possession of the Rented Items, including their "public use" as defined in the Illinois Carnival and Amusement Ride Inspection Law, 56 Ill. Adm. Code 6000.10.

_____ Date _____

signature of agreement

I have received and understand the operating procedures for this Moon Jump ("Rented Items").


_____ Date _____

signature of agreement

SETTING IT UP



The space walk has four parts – the unit, blower(s), extension cord(s) and anchors. Select an area...

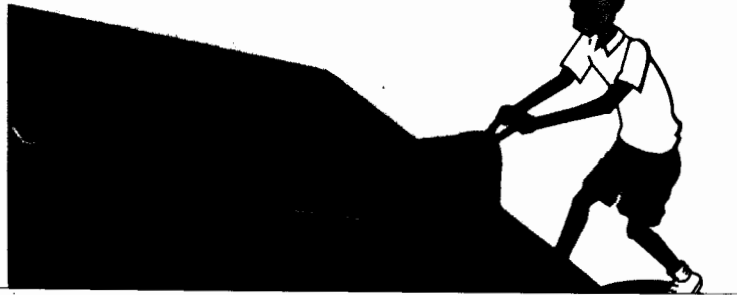

1ST
FIRST PLACE RENTAL

4975 Route 71 Oswego, IL 60543

630-554-3155


www.firstplacental.com



...for the space walk.
Unroll it flat on the ground,
using the fabric positioning loops.




Using only one 50 foot extension
cord for each blower.

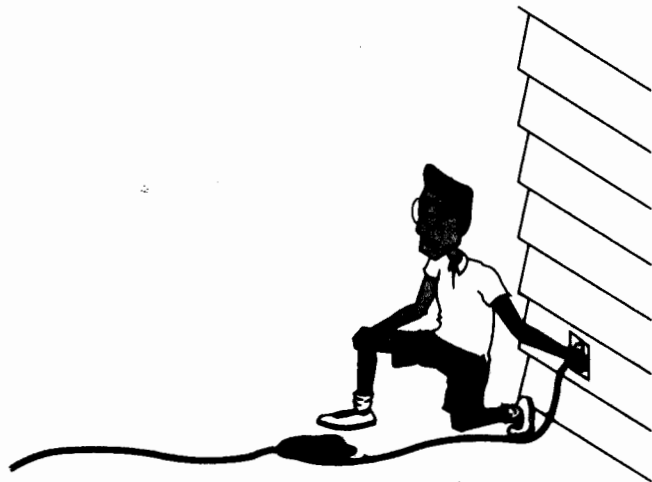

Plug each blower into a 115 volt electrical outlet. Make sure the outlet has either a SLO-BLO 20 AMP fuse or 30 AMP fuse circuit. The blower should be the only thing plugged into that circuit. If two blowers are required they must be on separate circuits.




Using straps (bundle ties) provided,
tie all vents and air release stubs in
the closed position.

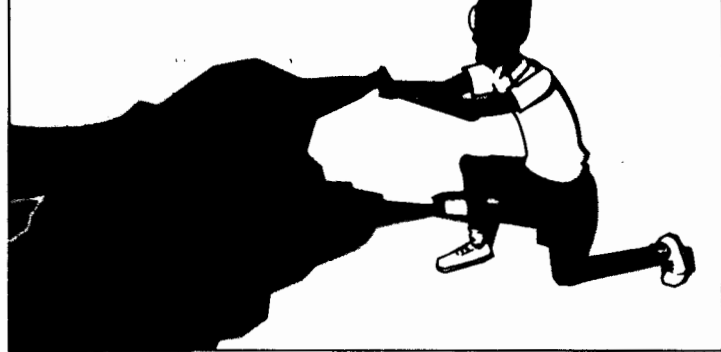

Slip the six foot tube in the rear of
the space walk snugly around the
blower outlet and secure it with the
draw string.



Inflation takes five minutes. The blower
runs continuously while the space walk is
in use. Once inflated, unit
can re-positioned
then anchored
into final
position.

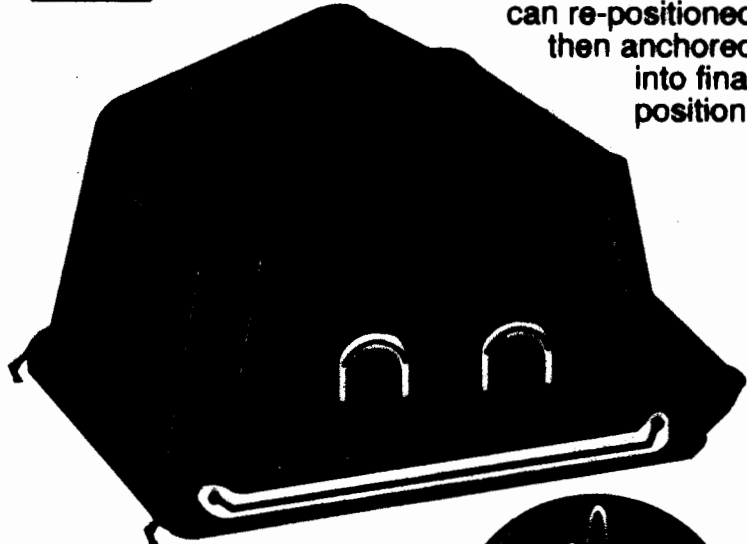


Space Walk must be anchored

Hammer wood stake into ground and
then tie rope from unit to anchor.

Stake should be within 12 inches from
unit to prevent tripping.

To test the anchor pull up with a firm
lifting force to assure the it is secure.

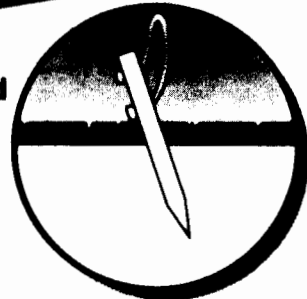

TAKING IT DOWN


1 Remove riders from the unit and unplug blower. Disconnect the blower from the unit and open the air vents.

CAUTION: Do not jump on partially inflated unit.





2 When the unit is deflated, fold each side to the center allowing one side to overlap the other.

3 Next, fold in half again to form single width.

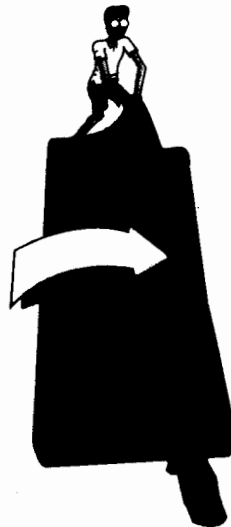

4 Starting from the door, roll the unit toward the rear pushing any excess air from the space walk.

5 Place tie straps under the unit, tuck in the tubes and tie the bundle so it is secure.

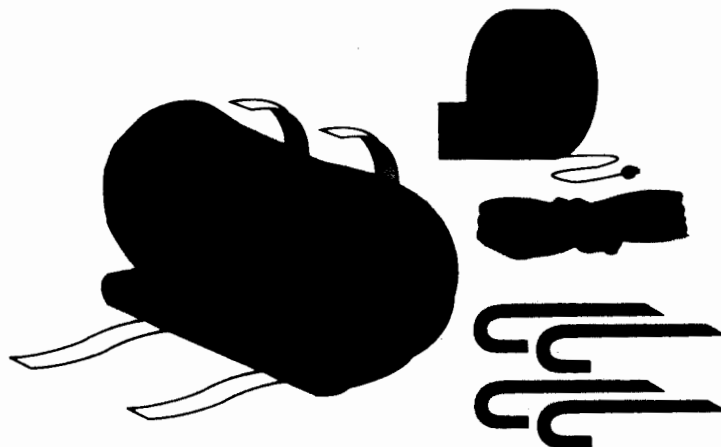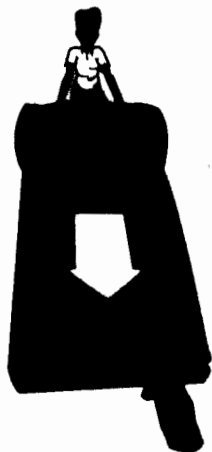

MOON JUMP RENTAL
INDEMNIFICATION AGREEMENT

INDEMNIFICATION: Inflatable amusement attractions such as Moon Walks ("Rented Items") are inherently dangerous and should be used with great care. You agree to assume all risks inherent in the use of the Rented Items by You and all others. You agree to assume the entire responsibility for the defense of, and to hold First Place Rental and , Inc. harmless from any and all claims for damage to property or bodily injury (including death), resulting from the use, operation or possession of the Rented Items, including their "public use" as defined in the Illinois Carnival and Amusement Ride Inspection Law, 56 Ill. Adm. Code 6000.10.

_____ Date _____
signature of agreement

I have received and understand the operating procedures for this Moon Jump ("Rented Items").

_____ Date _____
signature of agreement

CUSTOMER COPY