

4975 State Route 71, Oswego
630-554-3155
1608 W. Church St. (Rt.34), Sandwich
815-786-3155



Safety Information Sheet

Landscape Tractor

- Clear mowing area of objects, people and pets.
- Keep riders off tractor.
- Limit loads to those you can safely control.
- Drive up and down a hill, not across.
- Do not ride where machine could tip or slip.
- Wear appropriate clothing. Wear safety glasses. Do not wear radio or music headphones.
- Do not leave machine unattended while running.
- Use extra care when loading or unloading the machine onto a trailer.

STARTING THE ENGINE:

1. Open the fuel shut off valve.
2. Lock the park brake.
3. Push the rear and mid-PTO knobs to the disengaged/off position.
4. Move transmission to neutral position. Foot off gas.
5. Lower any rear mount or midmount implement to the ground by pushing the rockshaft control lever forward.
6. Lower any front mount implement to the ground using the SCV lever.
7. Set the hand throttle lever to the 1/3 fast position.
8. Turn ignition key switch to the run position.
9. Check instrument panel indicator lights:
 - Alternator/battery charging light will glow.
 - Park brake light will illuminate if locked.
 - Engine oil pressure light will glow.
10. Turn key switch to start position. Release when engine starts.
11. Check instrument panel indicator lights:
 - engine oil pressure light should go out in 5 sec.

SET ENGINE SPEED AT FULL THROTTLE IF LIGHT DOES NOT GO OUT AFTER 10 SECONDS.

12. Warm the engine.
13. Unlock park brake.
14. Range shift lever provides three speed ranges; choose a speed range to match work application.
15. Move hand throttle lever to desired operation speed.
16. Slowly depress pedal downward to travel forward.
17. Release travel pedal to stop machine and change speed range.

IMPORTANT!! To prevent transmission damage, stop machine motion completely before shifting the range shift lever.