

## BRILLION SEEDER

### Parking Pin



To prevent machine from tipping backward on frame, disengage parking pin only when seeder is fully attached to tractor.


Be sure to observe the following sequence:

*When hooking up seeders:*

1. Attach tractor.
2. Remove klik pin, pull parking pin into outer position, replace klik pin.

*When unhooking seeder:*


1. Remove klik pin, push in parking pin, replace klik pin.
2. Disconnect tractor.

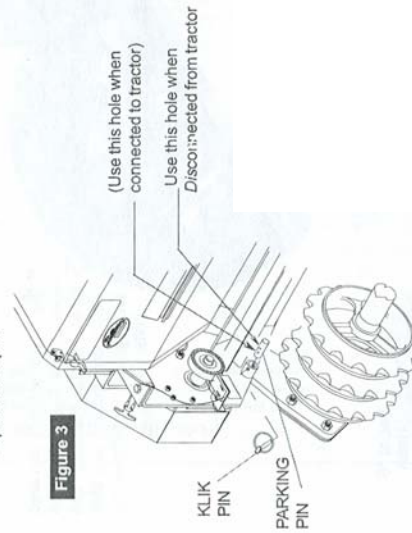

**Figure 3**

### Seed Rate Adjustment-Adjusting the Box Slide

When properly adjusted, the holes in the slide should line up with the holes in the box, with the control handle set at "6". To make an adjustment, loosen the control handle on the box, move the slide until the holes line up. When the handle is moved to "0" the holes in the box should be completely covered. If the holes are not covered, loosen the three bolts holding the seedmeter casing and shift it slightly so that the "0" mark is farther from the control handle. Retighten the bolts. Move control handle to "0". Holes in the box should then be completely covered.

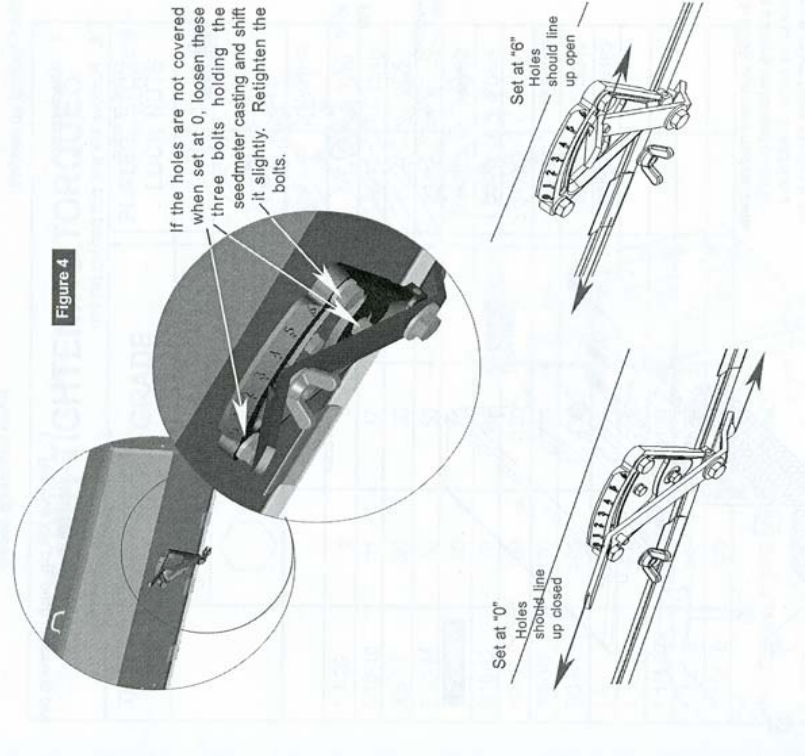

**Figure 4**